


DELUXE COFFIN BOXES -ASSEMBLY INSTRUCTIONS-
(Includes instructions for the modern casket, toe pinchers and crate)

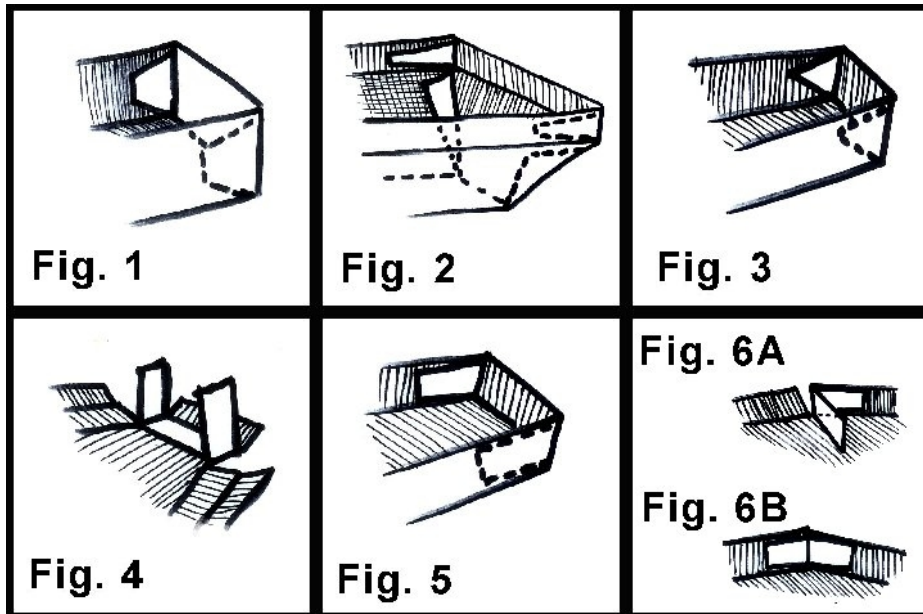

WHAT YOU'LL NEED: Scissors, Elmer's glue (or a glue stick), and a ruler or other straightedge.

MODERN CASKET ASSEMBLY: Begin by cutting out the box on page 1. Fold the four black tabs downward. Then fold the two liner panels downward. Fold the two side panels and the two end panels downward and we're ready to start gluing things together.

For each end of the box, place the side and end panels in their proper position and glue the black tabs to the inside of the side panels, as shown in Figure 1. Fold the two liner panels down over the black tabs and glue the liner panels to the backs of the side panels.

To finish the box, cut out a box liner on page 2 (use box liner A if you want to include a skeleton, or use box liner B for an empty coffin). Fold the box liner's top and bottom panels upward. Glue the liner in place inside the box and carefully trim the edges of the end panels if necessary.

Next cut out the lid on page 3. Fold the four large black tabs (edge tabs) downward and then fold the four small triangular black tabs (side tabs) downward. The four small tabs are a bit tricky to fold but if you gently curve the paper first they should fold OK. Now fold the four liner tabs downward and then fold the four rectangular edge panels downward. Fold the two side panels and the two end panels downward. And now it's time for more glue...

(continued on page 2)

For each end of the lid, position the side and end panels in their proper position and glue the side tabs to the inside of the side panels as shown in Figure 2. Then position the edge panels properly and glue the edge tabs to the inside of the edge panels as shown in Figure 2. Fold the four liner panels down and glue them to the back of the edge panels.

Now cut out the lid liner on page 2. Fold the four side panels upward and then glue the lid liner to the inside of the lid. The lid is now finished, but you may want to add one of the decorations on page 3. Choose the one you prefer, cut out and glue in place. Now place your finished lid onto the box and your casket is complete!

'TOE PINCHER' ASSEMBLY: Begin by cutting out the box on page 1. Fold the four black end tabs and the two black side tabs downward (it's helpful to gently curl the side tabs first and then fold them). Next fold the four liner panels downward and then fold the four side panels and the two end panels downward. And now it's time for some glue...

Position the side and end panels in their proper position and glue the end tabs to the inside of the side panels as shown in Figure 3. Position the upper and lower side panels properly and glue the side tabs to the inside of the lower side panels. Fold the four liner panels down and glue them to the inside of the side panels.

Now cut out a box liner on page 2 (use box liner A if you want to include a skeleton, or use box liner B for an empty coffin). Fold the top and bottom panels upward. Glue the box liner to the inside of the box and trim the upper edges of the end panels if necessary. The coffin is now ready for a lid.

Cut out the lid on page 3. Fold the six liner panels downward and then fold the four side panels and the two end panels downward. Cut out the four connectors on page 3 and bend downward along the green lines. For each end of the lid, position an end connector over the back of the end panel as shown in figure 4.

Position the end panels and side panels correctly and glue the end connectors to the inside of the side panels as shown in Figure 5.

Now position the side connectors over the lower side panels as shown in Figure 6A and glue them down. Then position the upper and lower side panels correctly and glue the side connectors to the inside of the upper side panels as shown in Figure 6B. Fold the six liner panels down and glue them to the inside of the side and end panels.

(continued on page 3)

Cut out the lid liner on page 2 and glue it to the inside of the lid. The lid is now finished, but you may want to add one of the decorations on page 3. Choose the one you prefer, cut out and glue in place. Now place the lid onto the box and your coffin is complete!

WEATHERED CRATE ASSEMBLY: Begin by cutting out the box on page 1. Fold the four large black tabs (side tabs) downward and then fold the four smaller black tabs (edge tabs) downward. Next fold the four outer panels downward and then fold the four edge panels downward. Now fold the two side panels and the two end panels downward. And grab some glue...

For each end of the box, position the side and end panels properly and glue the side tabs to the inside of the side panels as shown in Figure 2. Position the long and short edge panels properly and glue the edge tabs to the inside of the long edge panels as shown in Figure 2.

Fold the four outer panels down and glue them to the inside of the edge panels. Now cut out the box liner on page 2 and fold the four side panels upward. Glue the box liner to the inside of the box. If you want, you can now choose the skeleton panel on page 1 or the soil panel on page 2, and glue that panel over the center panel of the box liner. Your crate is now ready for a lid.

Cut out the lid on page 3. Fold the four black side tabs downward. Then fold the four outer panels downward. Next fold the two side panels and the two end panels downward. For each end of the lid, position the end and side panels correctly and glue the side tabs to the inside of the side panels, in a similar manner to that shown in Figure 5.

Fold the four outer panels down and glue them to the inside of the side and end panels. Finish the lid by cutting out the lid liner on page 3 and gluing it to the inside of the lid. Place the lid onto the box and your weathered crate is complete!